

RYOBI RY18PSX10A-120 Cordless Pruning Chainsaw 18V

18V ONE+



SKU: IT66964

€159.95

Specifications

Technical Specifications

- Voltage: 18V
- Blade Length: 4" / 10cm
- Battery capacity: 2.0 Ah
- Universal battery for all RYOBI 18V rechargeable devices
- Charging time: 60 min
- Chain speed: 6 m/s
- Chain pitch: 8.26 mm
- Gauge: 1.09 mm
- Max. cutting capacity wood: 80 mm
- Motor BRUSHLESS
- Ability to make 65 cuts in 60mm hardwood with a single charge

CAUTION!

- It only requires applying oil directly to the bar and chain

Assembly

- When assembling a chainsaw, make sure the teeth of the chain are facing forward and the letters are facing downwards.

General Specifications

- The tool-less chain tensioning system provides effortless chain tensioning
- Lightweight and easy to use
- Provides smooth, rapid cuts
- Two stage trigger to avoid accidental activation
- Work comfortably thanks to the ergonomic Gripzone handle that is suitable for both right- and left-handed users
- Manual oiling system to make operations and maintenance as simple as possible
- Lightweight, compact and manoeuvrable design reduces fatigue, allows for easy transportation and controlled precise cuts
- Is perfect for pruning, limbing and cutting in and around the garden and is supremely easy and safe to use

Included in the Box

- 1 Battery 2.0 Ah
- 1 Charger
- 1 Chain
- 1 Blade
- 1 Chain oil 50ml
- 1 Blade Guard

WARRANTY

- [Click HERE for the Extended Warranty Registration](#)
- *The purchase must be registered within 30 days from the day the product was purchased.
- **Batteries and chargers are not covered by warranty.

Weight

- Weight: 1.13 kg